


ACCU-FLOW

Argon Regulator for TIG or MIG Welding

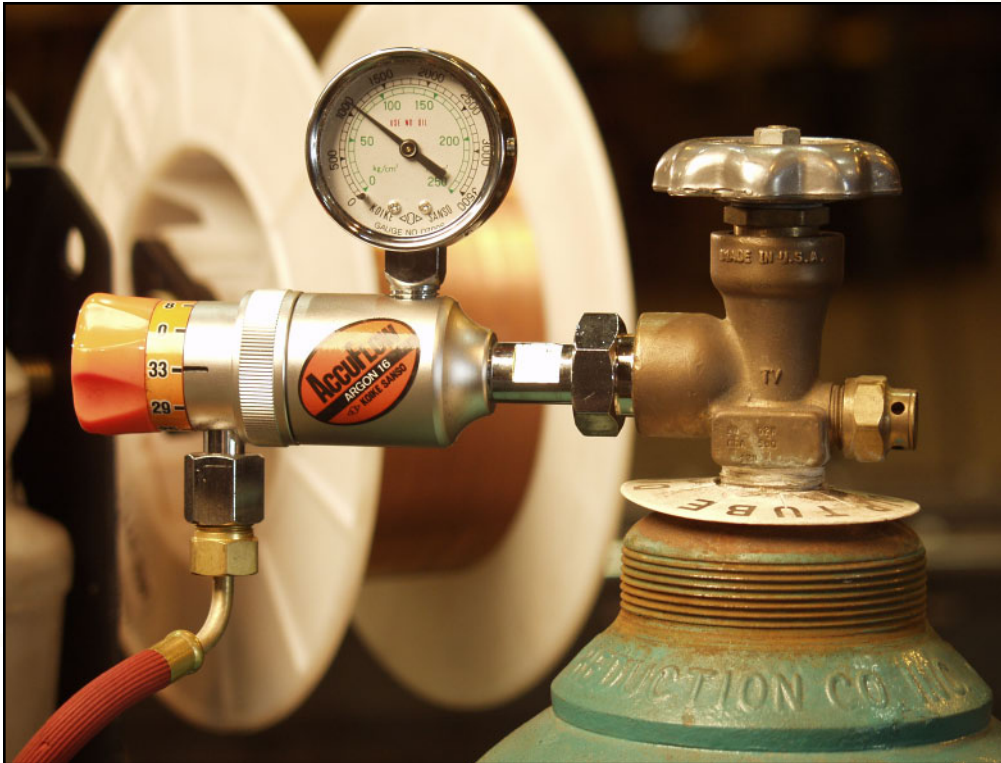

One Touch Flow Selector System for TIG or MIG Welding

The Accu-Flow for TIG or MIG welding from Koike Aronson utilizes a unique flow adjustment system. The flow rate of argon gas is adjustable with just a touch versus flow meter type regulators. The Accu-Flow helps to reduce gas waste by allowing the operator to set the exact flow setting quickly and easily, thus preventing excessive use of expensive Argon gas.

Features & Benefits

- **Patent Pending**
This exclusive flow select system allows accurate gas flow control by simply adjusting the dial, saving both time and gas
- **No Flow Tube**
No worries about flow tube needing to be upright to function, ball centering inaccuracies or tube breakage
- **Chrome Plated**
Durable finish on fittings provides corrosion resistance
- **Piston System Design**
The pressure regulating mechanism is free from pressure variation, ensuring high accuracy and durability
- **Triple Filters**
Three inlet gas filters prevent dirt and grit from entering the system
- **Compact and Lightweight**
Only .59 kg (1.3 lb), easy enough to carry just about anywhere
- **Two Models Available**
AR-16 allows accurate setting of low volume gas settings.
AR-30 allows accurate setting of high volume gas settings.

Specifications

AccuFlowAR16-1000-1105



ACCU-FLOW
Gas Flow Regulator for TIG Welding


SPECIFICATIONS	AR - 16	AR - 30
Gas	Argon	
Flow Rate Regulation Method	Flow Selector System	
Flow Rate Regulation Range	18-33 CFH 10 Step Setting (0, 8, 10, 12, 14, 16, 21, 25, 29, 33 CHF)	19-63 CFH, 10 Step Setting (0, 19, 23, 27, 31, 36, 42, 48 53, 63 CFH)
Delivery Pressure	28psi (2bar)	
Cylinder Pressure Gauge	250 kg/cm ² (3,500 lb/in ²)	
Weight	.59 kg (1.3 lb)	

MODELS	Part #
Description	
Accu-Flow Series Regulators	
AR16 (Argon Series) Tig Welding	2141006
AR30 (Argon Series) Tig Welding	2141014

CONNECTIONS
Type of Thread
Inlet Connection CGA 580 (0.960-14-RH-EXT)
Outlet Connection 5/8-18 RHF

How to Operate

- 1) Before opening cylinder valve, set the scale division at "0".
- 2) Turn the dial clockwise to increase flow rate gradually.
- 3) For setting flow rate, match the corresponding scale division of dial with the scale set point. At "0" the gas does not flow.
- 4) Return setting to "0" after use.
- 5) To terminate operation, close the cylinder valve and discharge gas from inside regulator by turning the dial clockwise then back to "0". If desired, disconnect regulator from the cylinder.

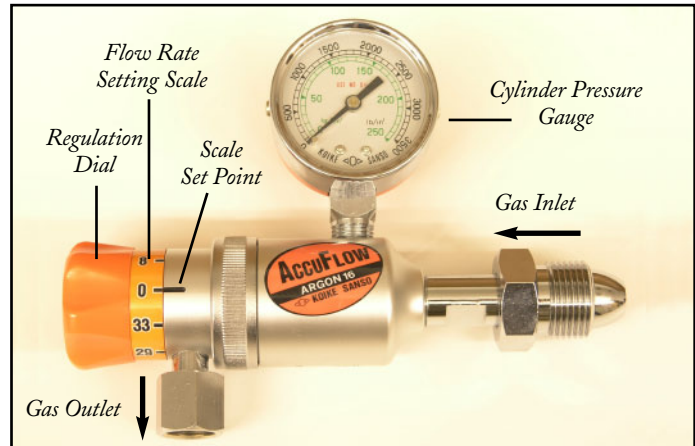

Inert Coupling Option

A-Set - Quick Coupling Set for Flow Meter Outlet to Hose		
Set Model	Plug	Socket
LSP-3SMF Part # ZA4234020	LS-3SM CGA-032 5/8" - 18 UNF Part # ZA423-3020	OP-3SF CGA-032 5/8" - 18 UNF Part # ZA423-3022
B-Set - Coupling Set for Hose to Welding Unit		
Set Model	Plug	Socket
LSP-3SFM Part # ZA4234023	LS-3SF CGA-032 5/8" - 18 UNF Part # ZA4233021	OP-3SM CGA-032 5/8" - 18 UNF Part # ZA423-3023



KOIKE ARONSON, INC.

Main Office:
635 W. Main St., P.O. Box 307
Arcade, NY 14009
Phone (585) 492-2400 Fax (585) 457-3517

Visit us at www.koike.com



ISO 9001
JQA-2230
GUNMA - Koike